
Sanyo VPC-T850 Battery Replacement

This is a guide for replacing the removable battery included in the Sanyo VPC-T850. Removing the battery is required before replacing any other part of the camera.

Written By: James Robinson



Step 1 — Battery

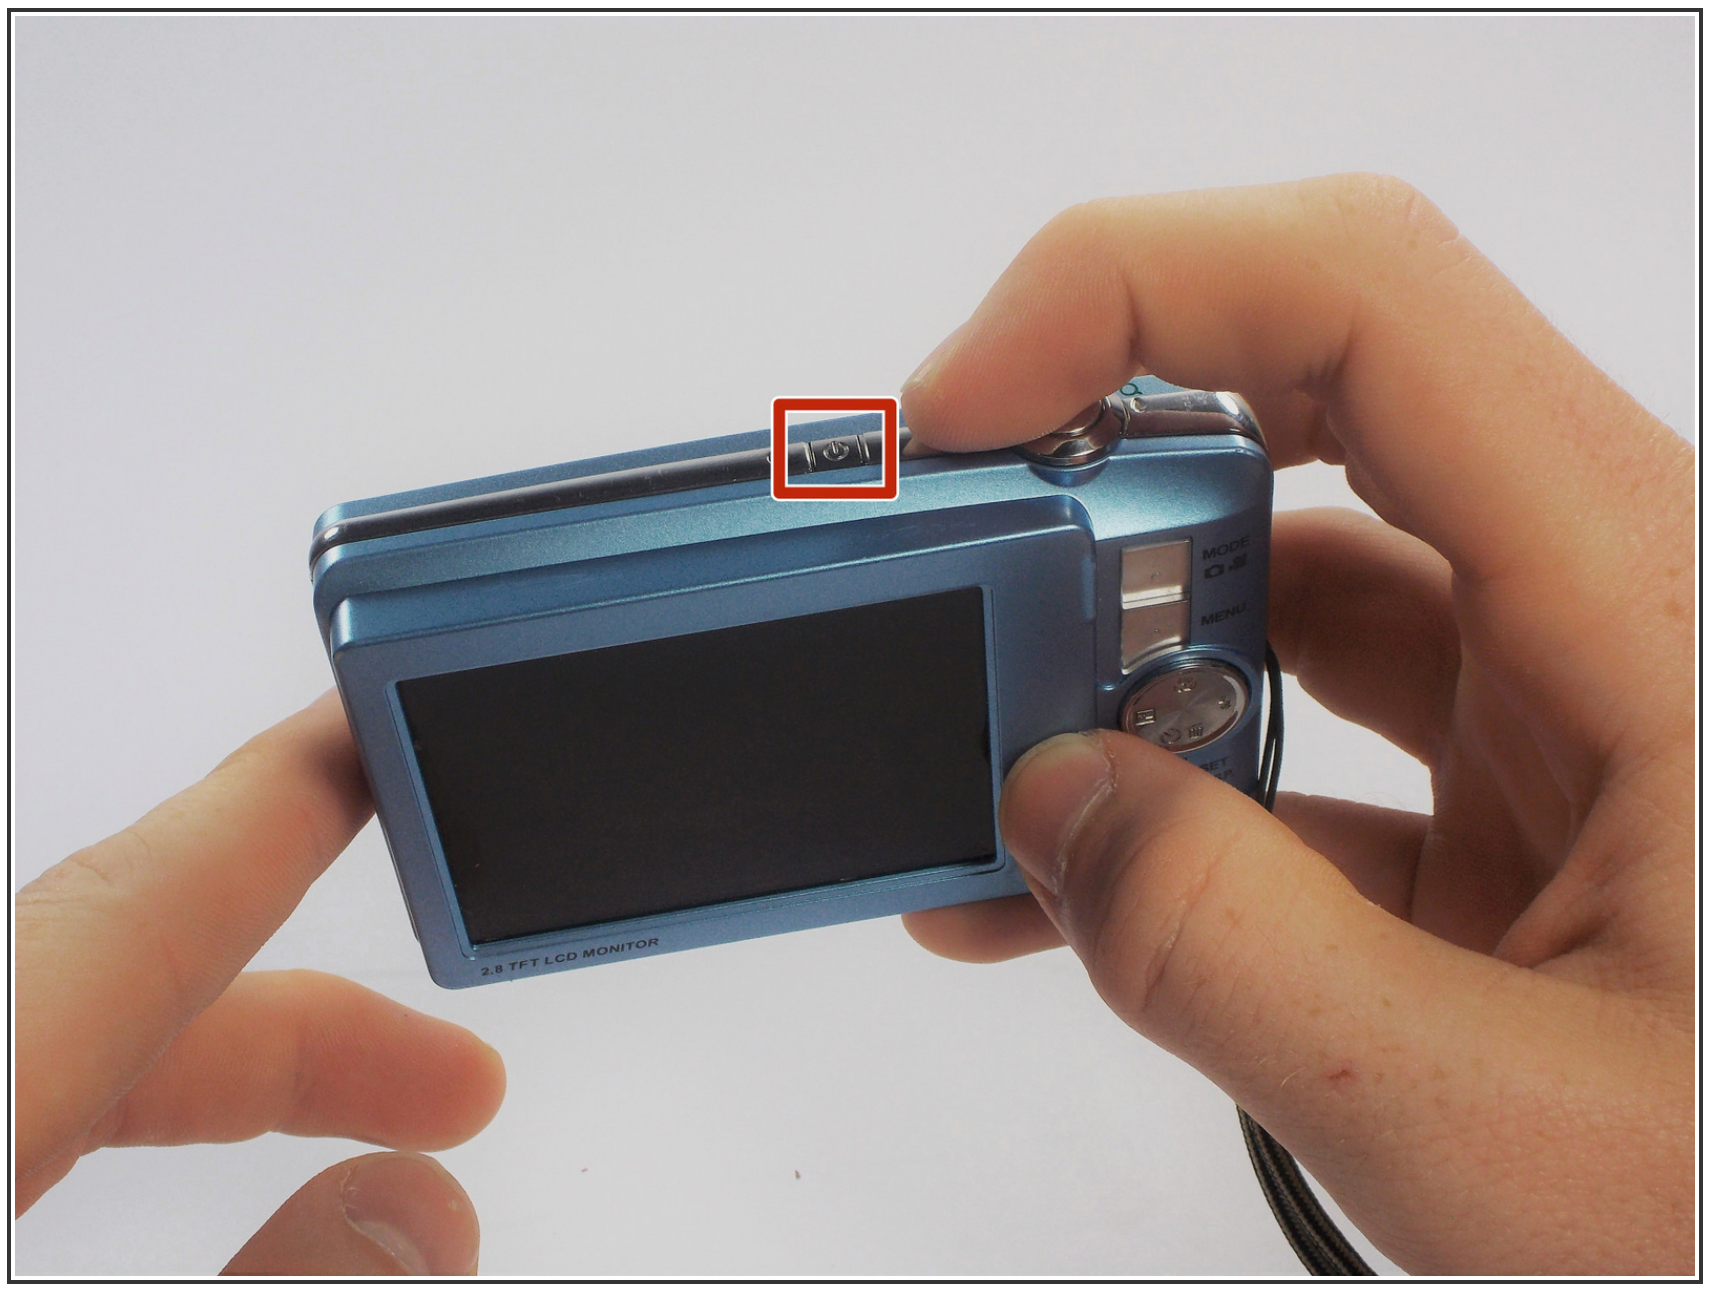


- Make sure the camera is powered off by pressing and holding the small, square button embedded in the top rim of the camera.

Step 2




- Locate the hatch found on the bottom of the camera.
- Open the hatch by gripping the small notch and sliding it outwards.

Step 3

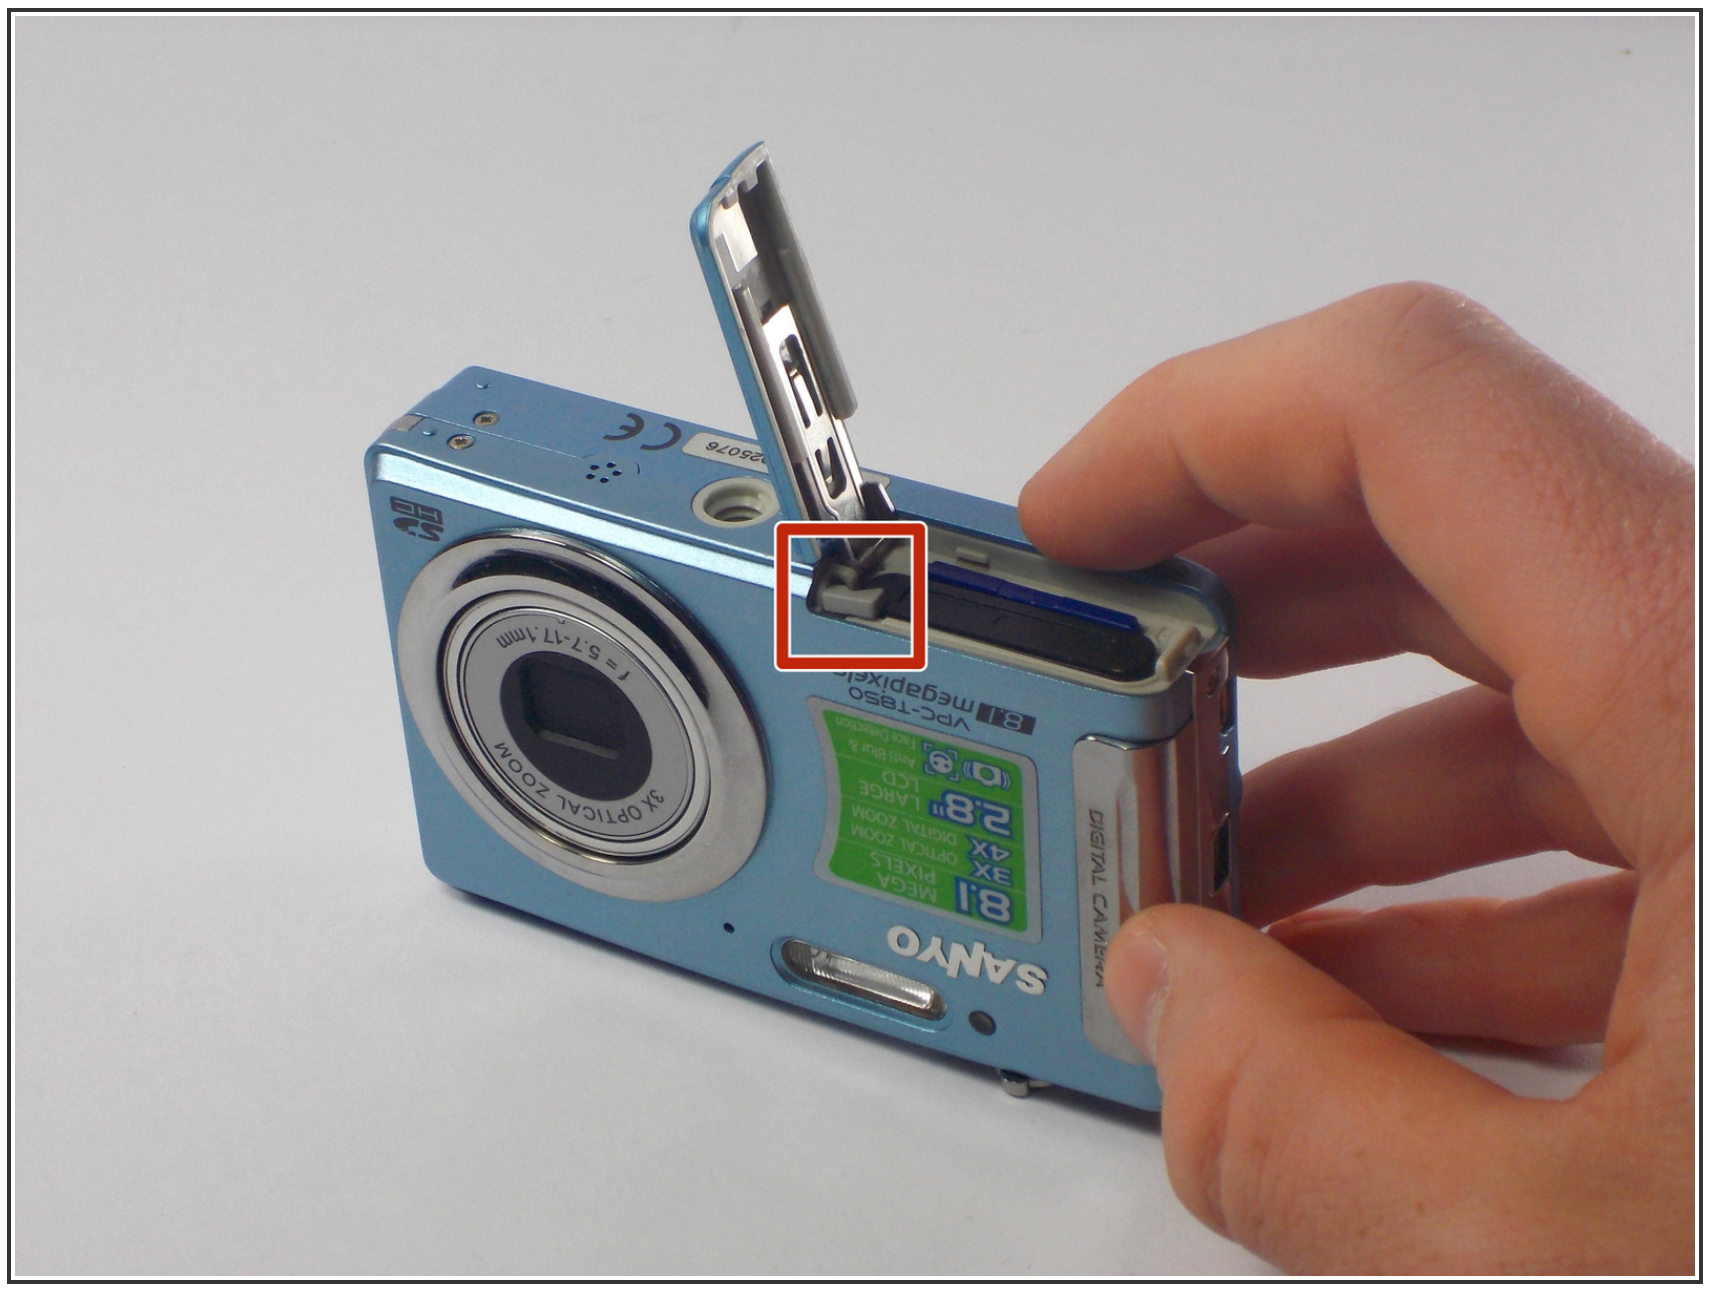

- Push the small, plastic arm out of the way to free the battery.
- The battery is spring loaded and will pop out slightly when the arm is moved.

Step 4

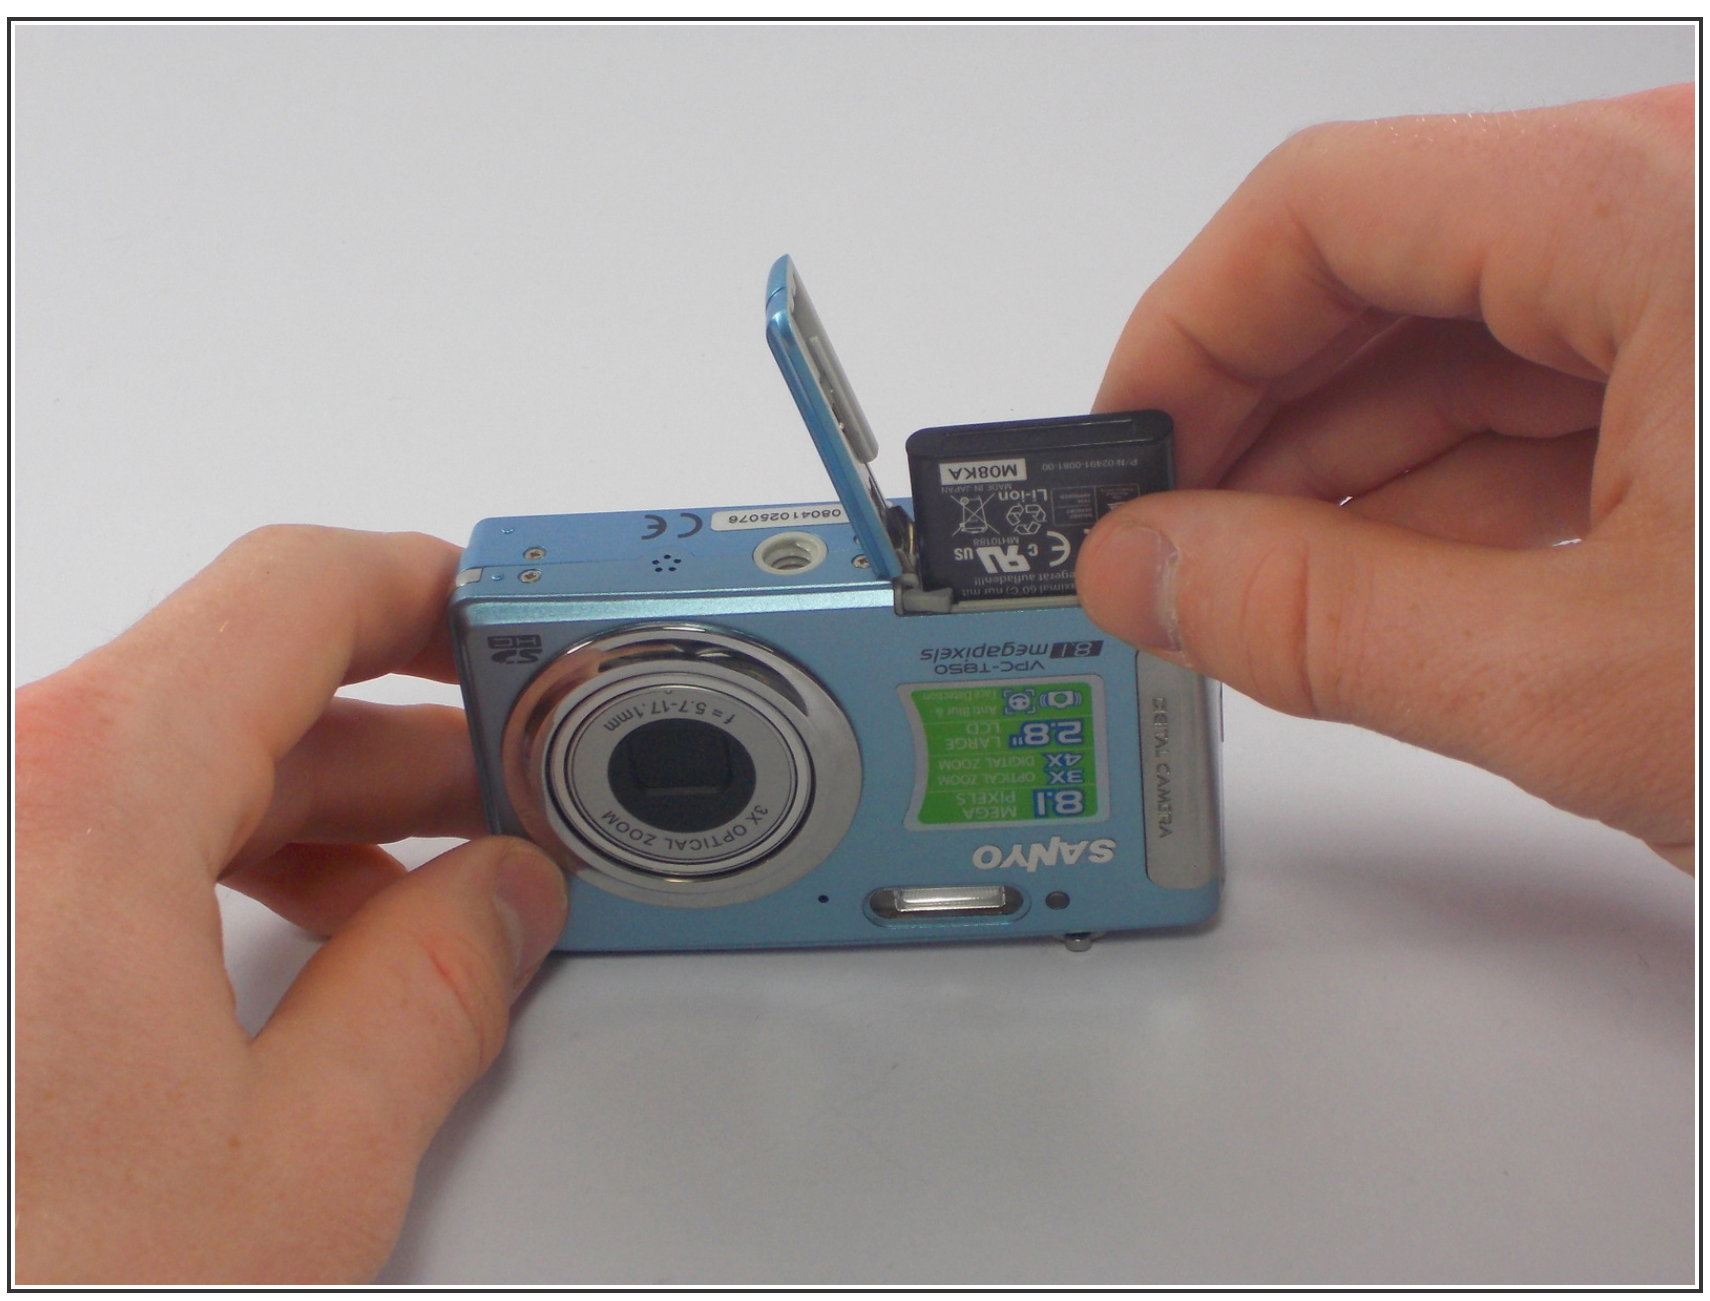

- Pull the battery out of the camera and close the hatch.
- To reinsert, there is a triangle on the battery indicating which direction to slide it in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 08:07:51 AM.

